



R-134aC

Check Gauge

Name: R-134aC

Main ferture

Check low side operation pressure to measures the level of Refrigerant in R-134aC systems.

Operation Step

1. Start engine.
2. Run air conditioner for 3-5 minutes.
3. Press the check gauge into LOW SIDE PORT.
4. Remove the check gauge and check the reading.
5. Press the release valve of the check gauge to reset.

NOTE: Please ensure the ventilation of the operation area.

Check Gauge's Spec.

- DN50 guage with four color pressure chart face.
- Gauge with rubber boot.
- Check gauge with stem with check chuck.
- Stem of the check gauge with reset valve.
- Pressure range: 0-200psi.

