

Tire Pressure Indicator Cap



Instruction



Under standard tire pressure, see-through window displays **GREEN**, signaling that car users can be normally driving.



As pressure is 25% below standard, see-through window displays **YELLOW**, signaling car users to inflate tire for safe driving



As pressure is 25%~30% below standard, see-through window displays **RED**, signaling car users to immediately check and inflate for safe driving.

Be sure the o ring seal(inside each unit) is in place whenever reinstalling a tire pressure cap. Installing without this seal will cause the tire deflate.

BENEFITS: By Fitting TYRE ZONED to your tyres

- 👉VISUALLY informs of LOW TYRE PRESSURE
- 👉IMPROVES FUEL CONSUMPTION
- 👉IMPROVES VEHICLE HANDLING/PERFORMANCE
- 👉INCREASES TYRE LIFE

Always Check each Tire before driving is very important.



Electronic Monitoring Device of our vehicles does not show you whether the tire is worn out or not, or surrounding of your vehicle, also, you might not aware whether your device is working or not.

Product Introduction

1. For Bike

TZ01 / TZ02 / different color



2. For Car & Bike & Bicycle

TZ03 / TZ0H (More than 52PSI)



3. For Bike - Woods Valve

TZ0B



Caution

***The PSI of the tire can be found in the driving manual.** Before selecting a product, be sure to know the tire pressure value (PSI) of the tire first, then, select the PSI that matches.

***Minus and plus 1PSI is acceptable.** (use 36PSI Tire Zoned on 37PSI tire)

***2 Year Limited Warranty.**

If found defective, return to the original purchase store (With receipt dated proof of purchase) for Immediate replacement.

***Do not** use this product on sport utility vehicle, as they may become lose or damaged by severe tire impact.

Instruction of hexagonal lock nuts:

(1)

First of all, place the hexagonal lock nuts at the bottom of the tire valve.

(2) Then wrench the TIRE ZONED VALVE CAPS tightly on the tire valve by hand.

(3) Use the spanner attached to tighten the hexagonal lock nuts by wrench it anti-clockwise towards to TIRE ZONED VALVE CAPS.

To remove TIRE ZONED VALVE CAPS, please loose the hexagonal lock nuts first by wrench it clockwise with the spanner.

(1)



(2)



(3)



Conversion Table

PSI → BAR

PSI	BAR(Rounding)	BAR(Actual)
26	1.8	1.79
28	1.9	1.93
30	2.1	2.06
32	2.2	2.20
34	2.3	2.34
36	2.5	2.48
38	2.6	2.62
40	2.8	2.75
42	2.9	2.89
44	3.0	3.03
46	3.2	3.17
48	3.3	3.30
50	3.4	3.44

PS I	BAR(Roundin g)	BAR(Actual)
52	3.6	3.58
54	3.7	3.72
56	3.9	3.86
58	4.0	3.99
60	4.1	4.13
65	4.5	4.48
70	4.8	4.82
75	5.2	5.17
80	5.5	5.51

Beware of COPYCAT!!

Fake



Be careful when you're
Purchasing on Taobao, e-
bay and amazon.

Original



For your safety, our
product is strictly tested
before selling, do not use
fake product which might
put your life in danger !!